



SUBARU

INSTALLATION INSTRUCTIONS

PART NUMBER: J121SFJ700


DESCRIPTION:

Installation instructions for the 2012 PZEV Decal, Impreza Sport 5 door.

- KIT CONTENTS:
- 1. PZEV Decal (1).
 - 2. Squeegee (1).
 - 3. Installation Instructions (1).




1 PZEV Decal

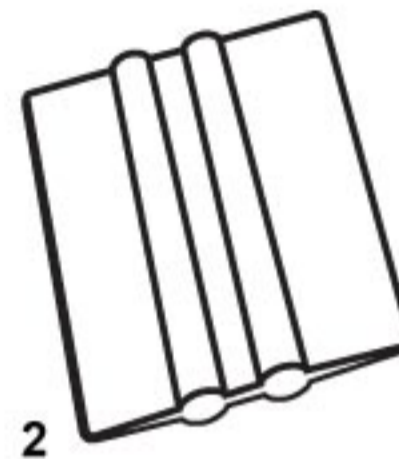


2


TOOLS REQUIRED:

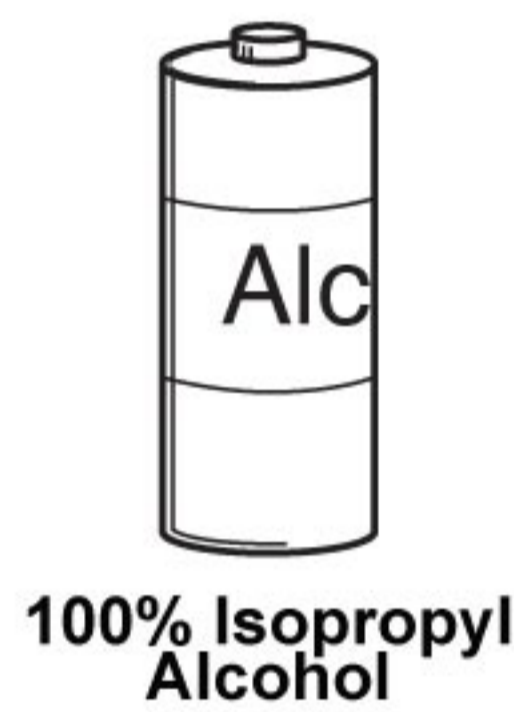

100% Isopropyl Alcohol

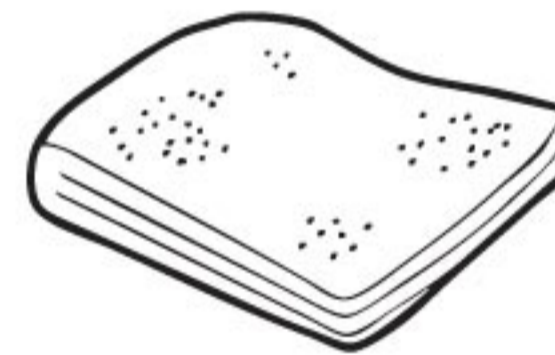

Soft lint-free Microfiber Cloth

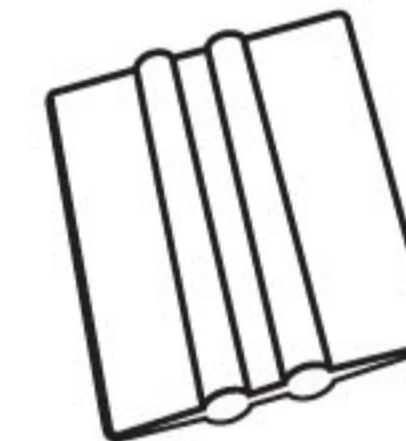

Squeegee

MEANING OF CHARACTERS:



Denotes warnings that may lead to serious physical injury or vehicle damage.



Denotes quality processes to be checked prior to moving to the next step.

Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.



Denotes cautions to be taken to avoid physical injury or electronic component damage.



Denotes specific tools that are necessary to complete the step.



Mask



Goggles



Denotes cautions to be taken to avoid vehicle and component damage.



Denotes instructional steps necessary to complete the process.



Rubber Gloves



Hearing Protection

PREPARATION - BEFORE INSTALLATION:

1. This product should be installed with proper installation tools.
2. Install this product while observing all warnings and precautions stated in this instruction booklet.
3. **VERY IMPORTANT: Thoroughly wash vehicle with Soap and Water.**
4. Parts storage should be flat at room temperature and in a clean dry place. **Care should be taken to avoid a dusty environment.**

Notes to the Installer

1. Read the entire installation pamphlet prior to beginning the installation of the accessory.
2. Ensure that the vehicle is properly protected in the area that the accessory is to be installed.
3. To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet / mat.
4. Always wear appropriate safety gear to include gloves and eye protection when required.


DESCRIPTION
PZEV Decal

ISSUE
00

DATE
12/1/11

SUBARU OF AMERICA


PAGE
1/03

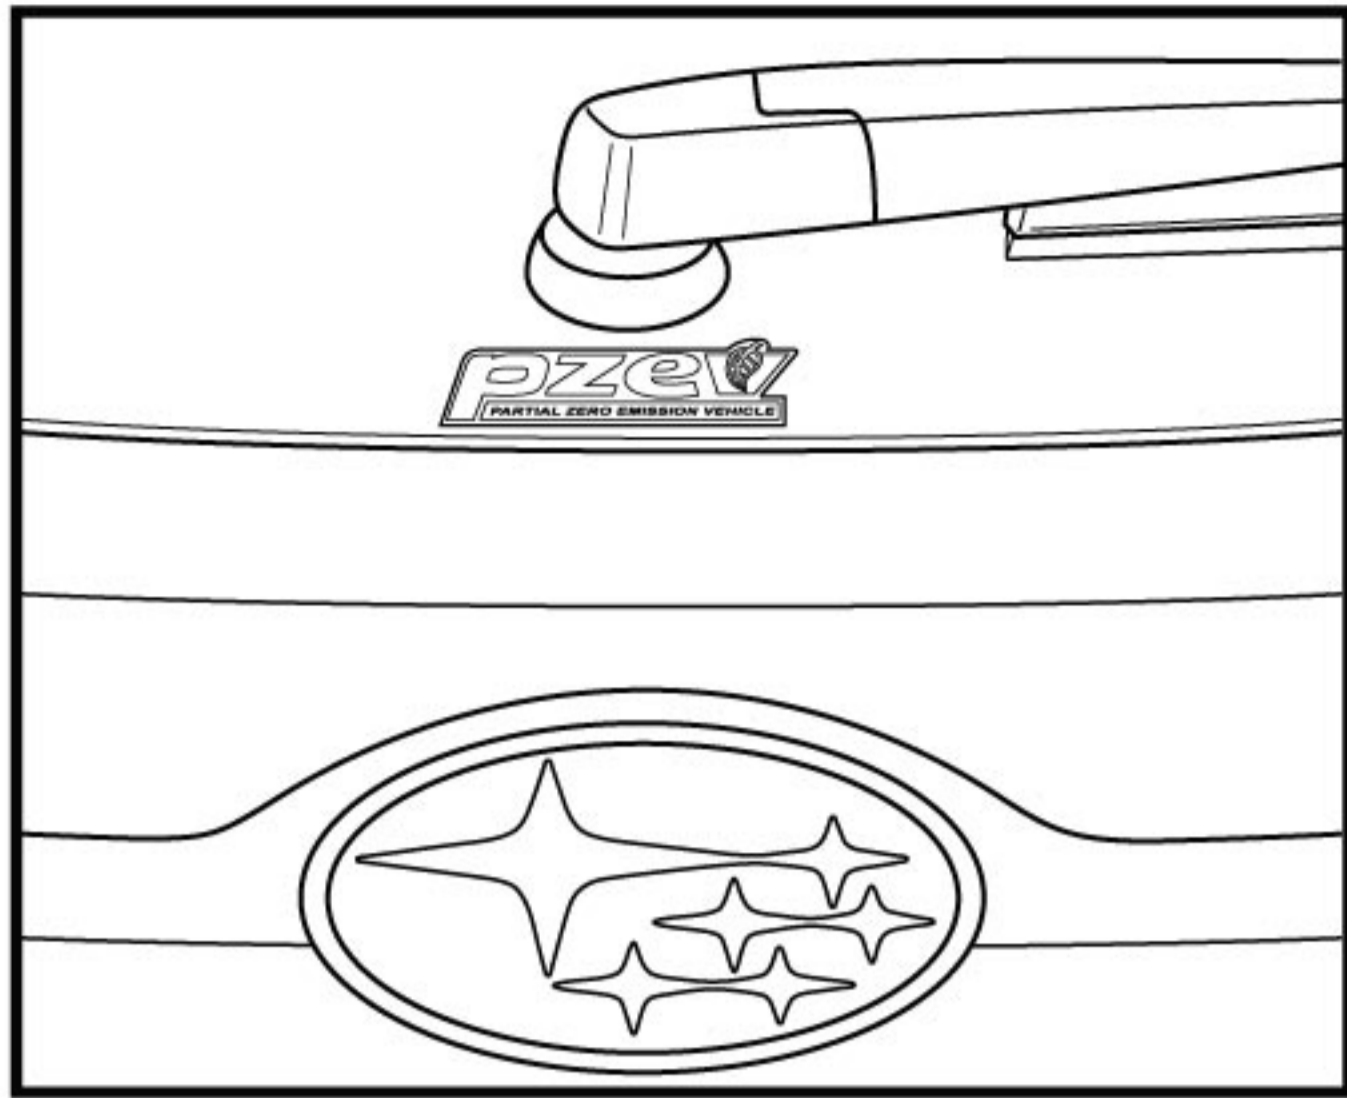

* PZEV Decal in place


1 Inspect Rear Window Surface

Inspect rear window under wiper for contaminants.

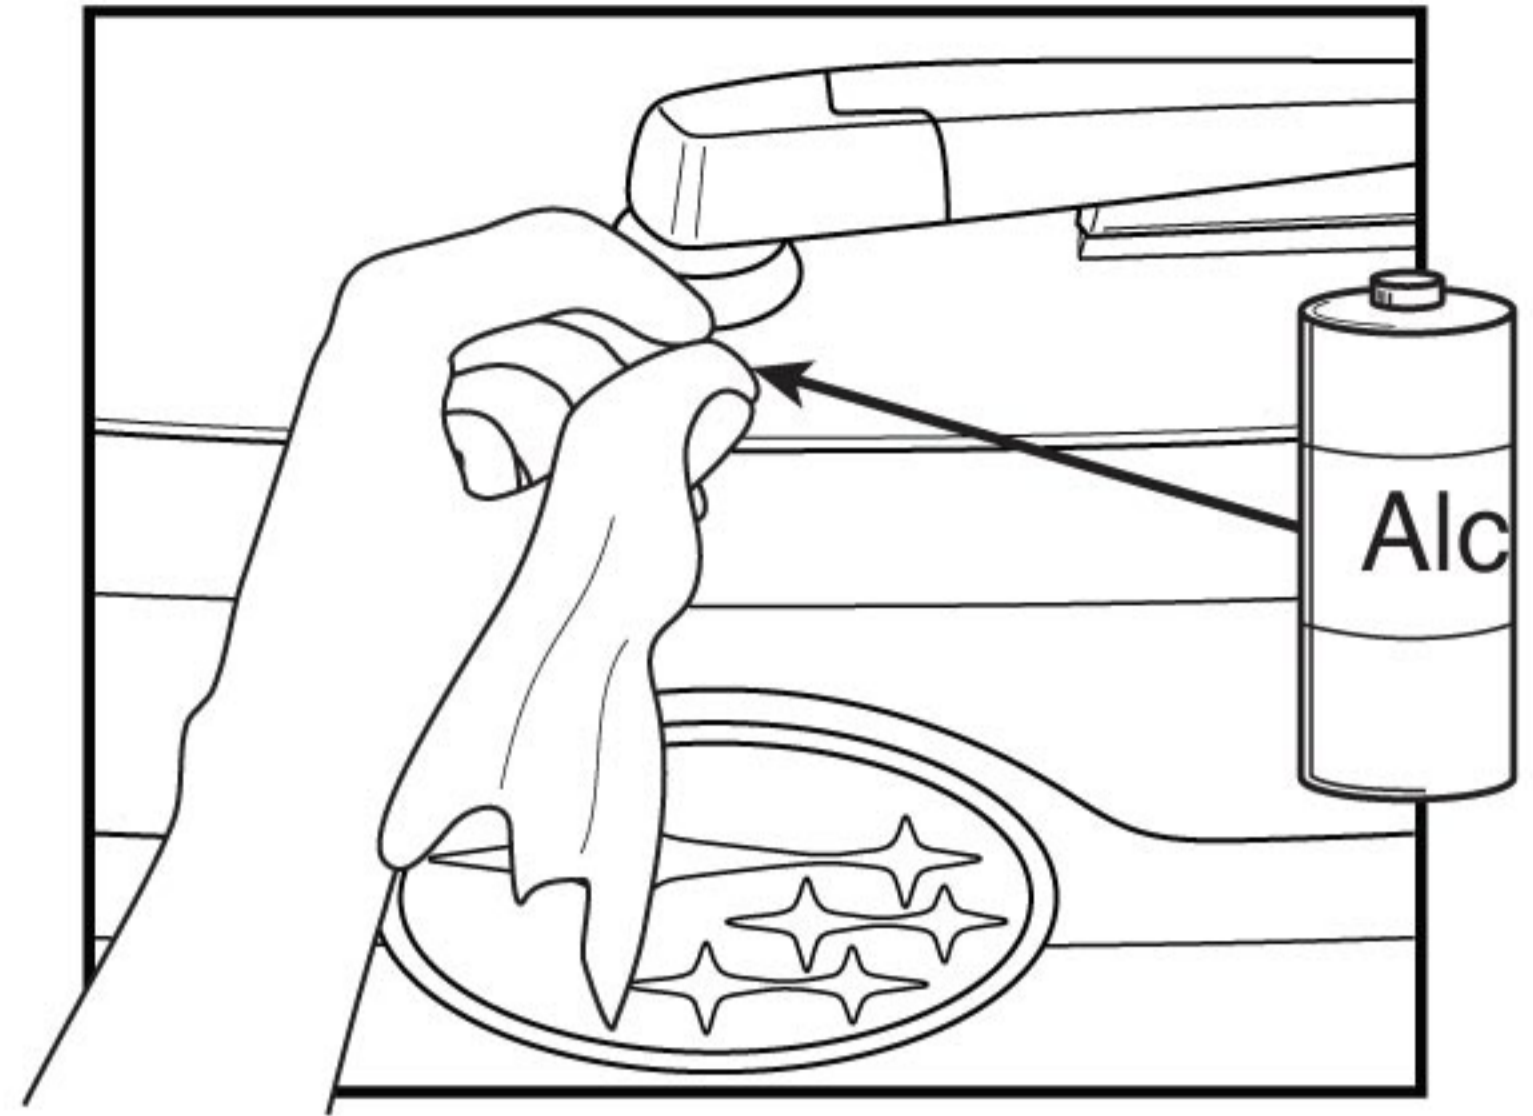


2 Wipe with Alcohol

With a clean lint-free cloth, use Alcohol to wipe area where decal is to be installed. Allow the area to dry completely.

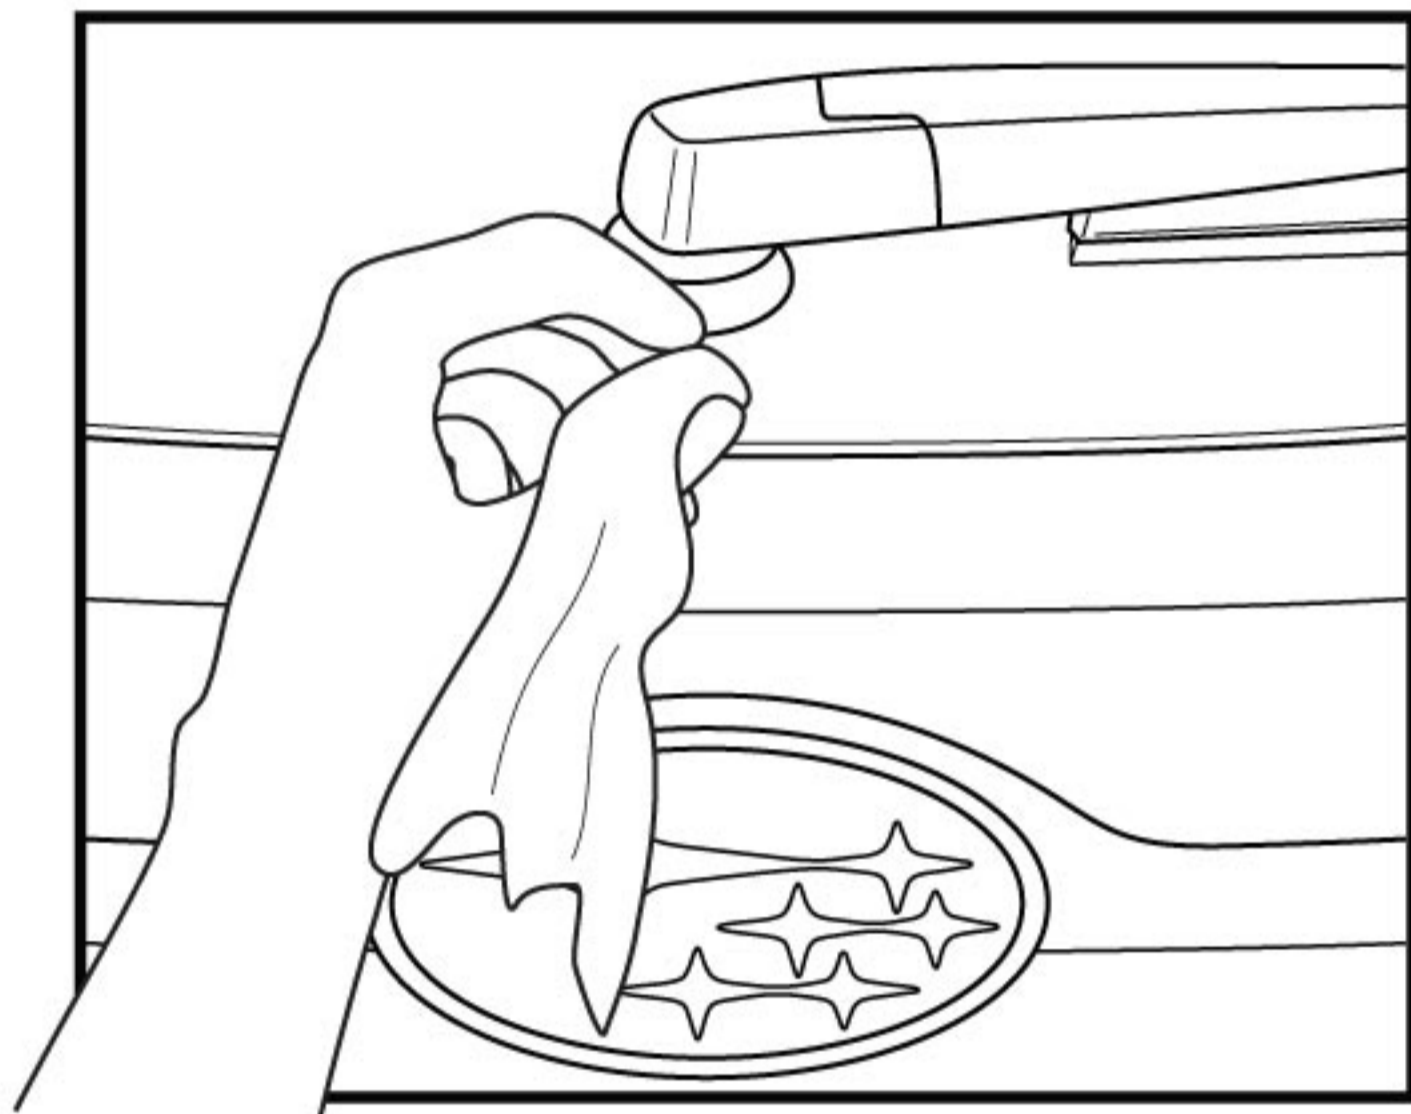

3 Dry Wipe

Dry wipe with fresh, dry lint-free cloth.

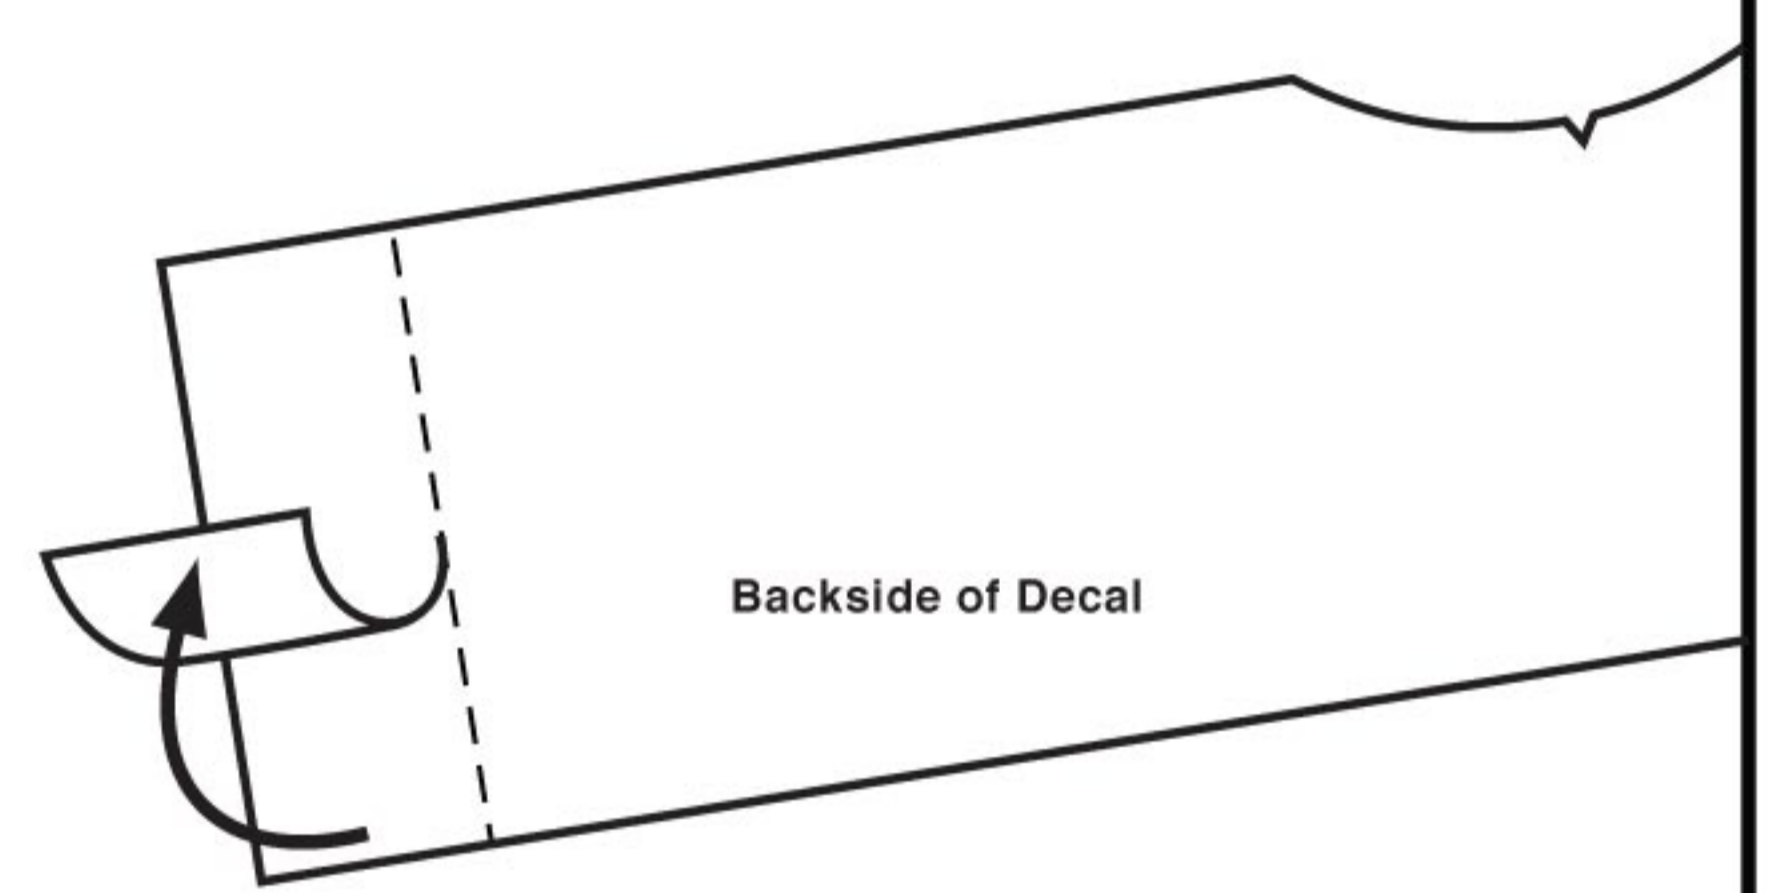


Backside of Decal

**Use care when handling decal so no finger prints are left on the part adhesive.

4 Remove Small Liner Tab


Remove small liner tab from backside of decal.

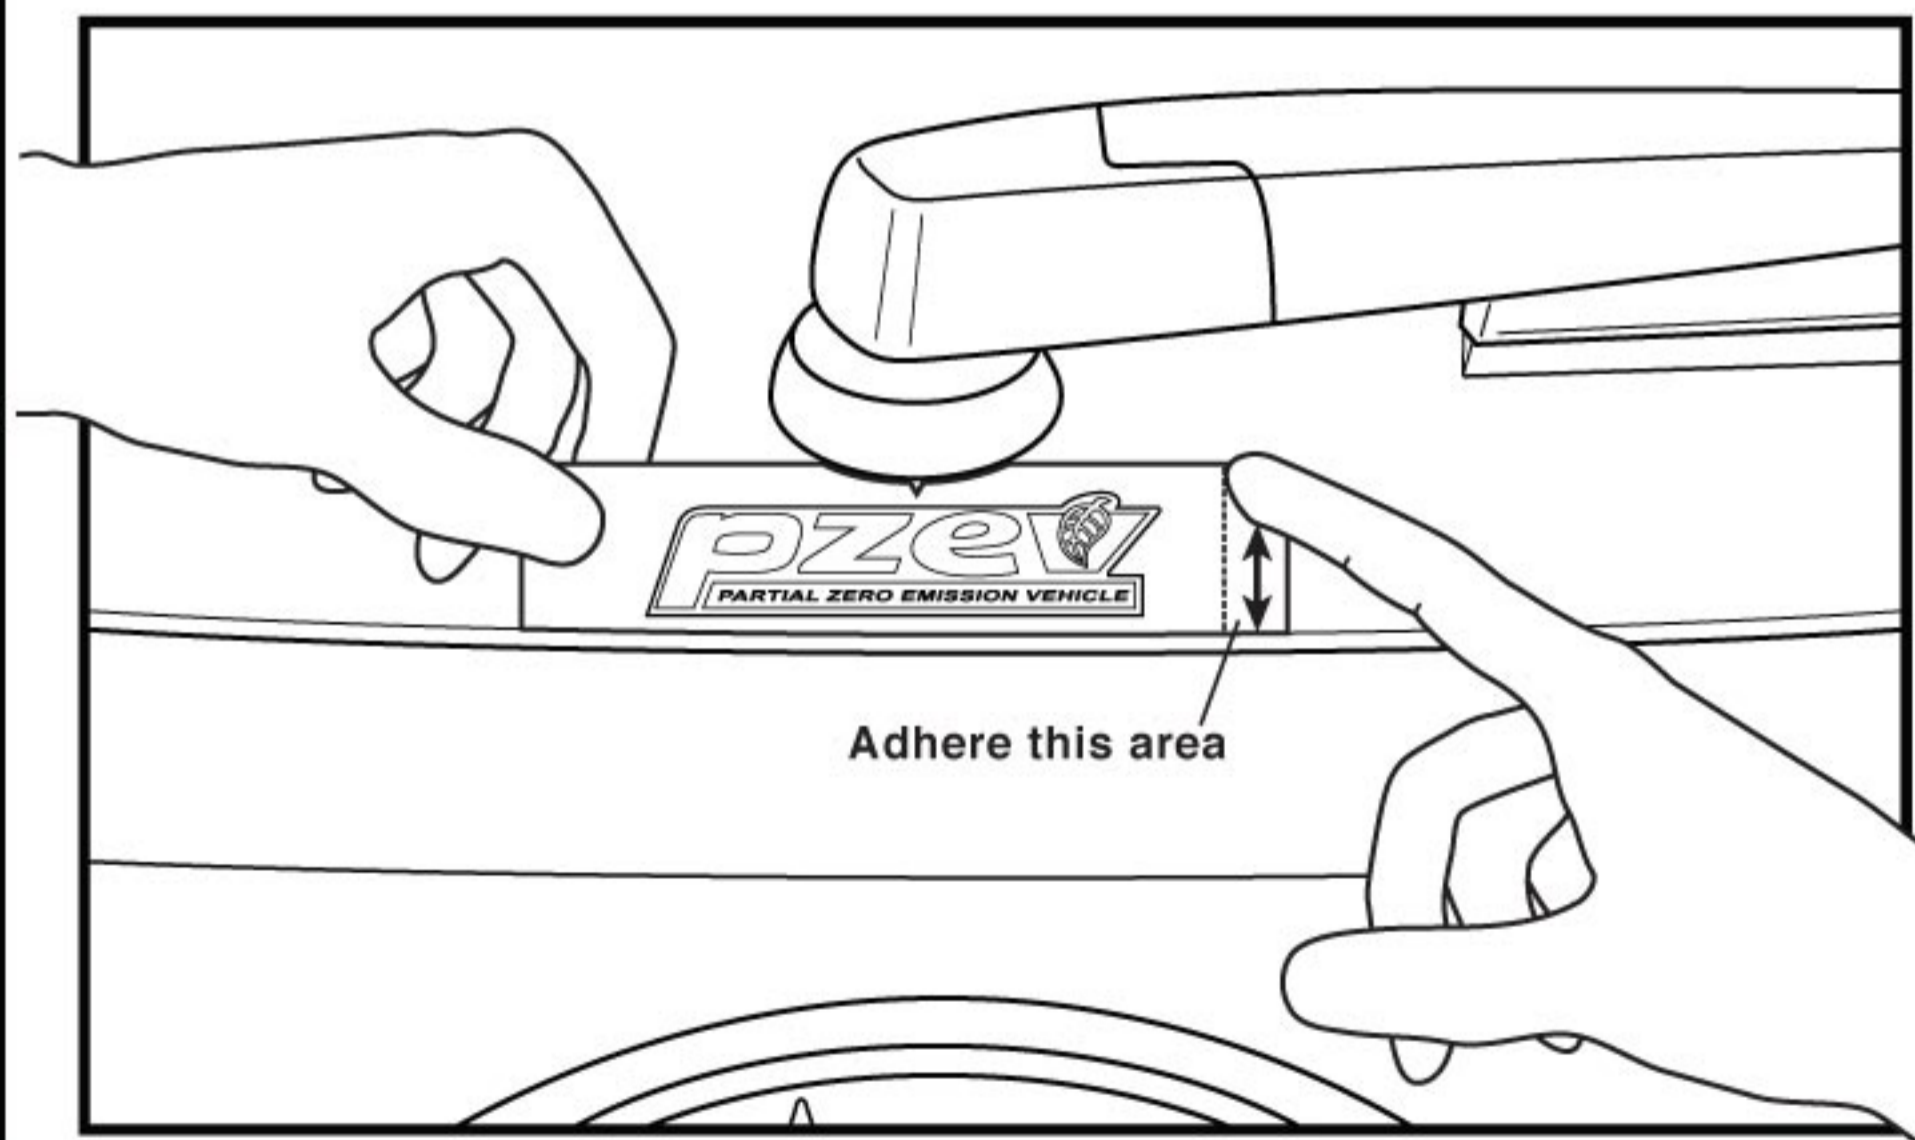

Adhere this area



5 Locate Decal

Locate decal to glass edge, and center to wiper. Adhere exposed carrier to glass.

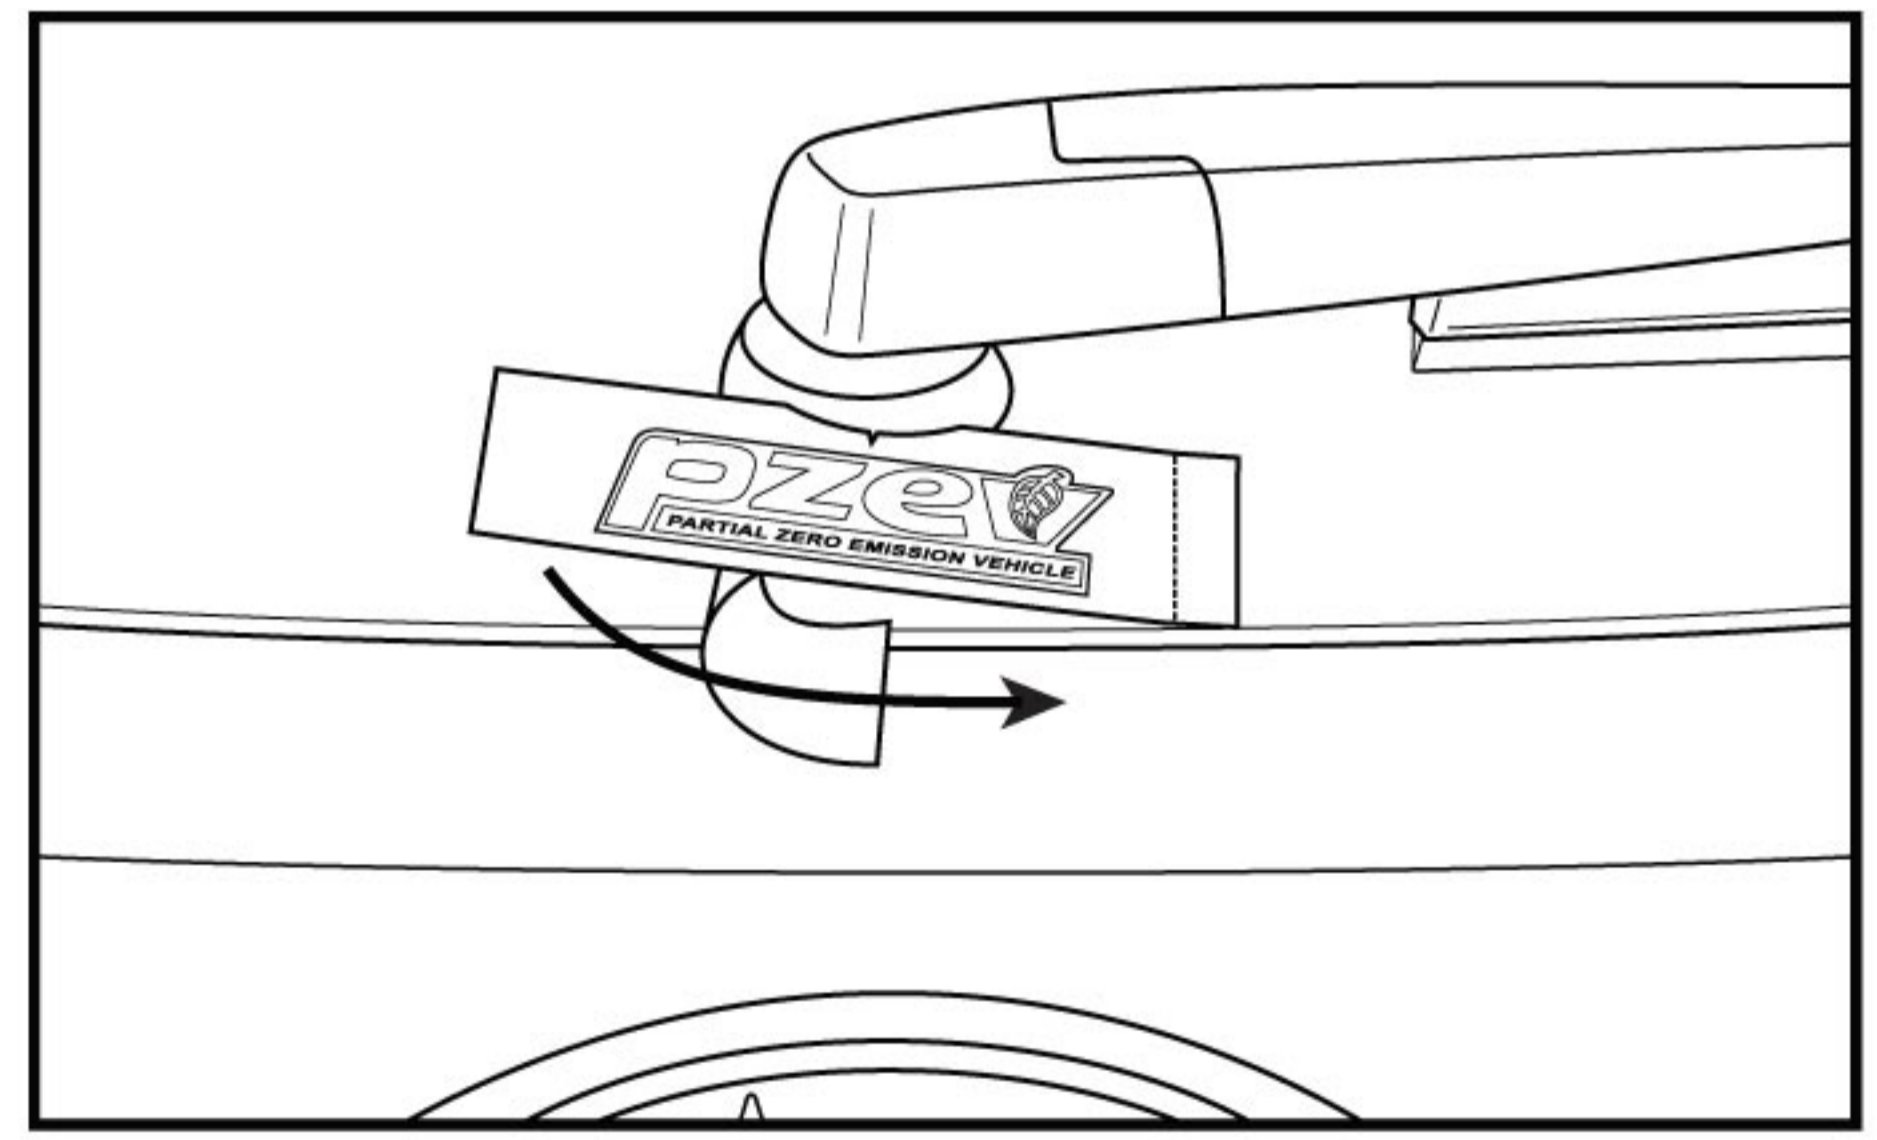


6 Remove Remaining Liner


Holding decal off of glass surface, remove remaining liner from backside of decal.

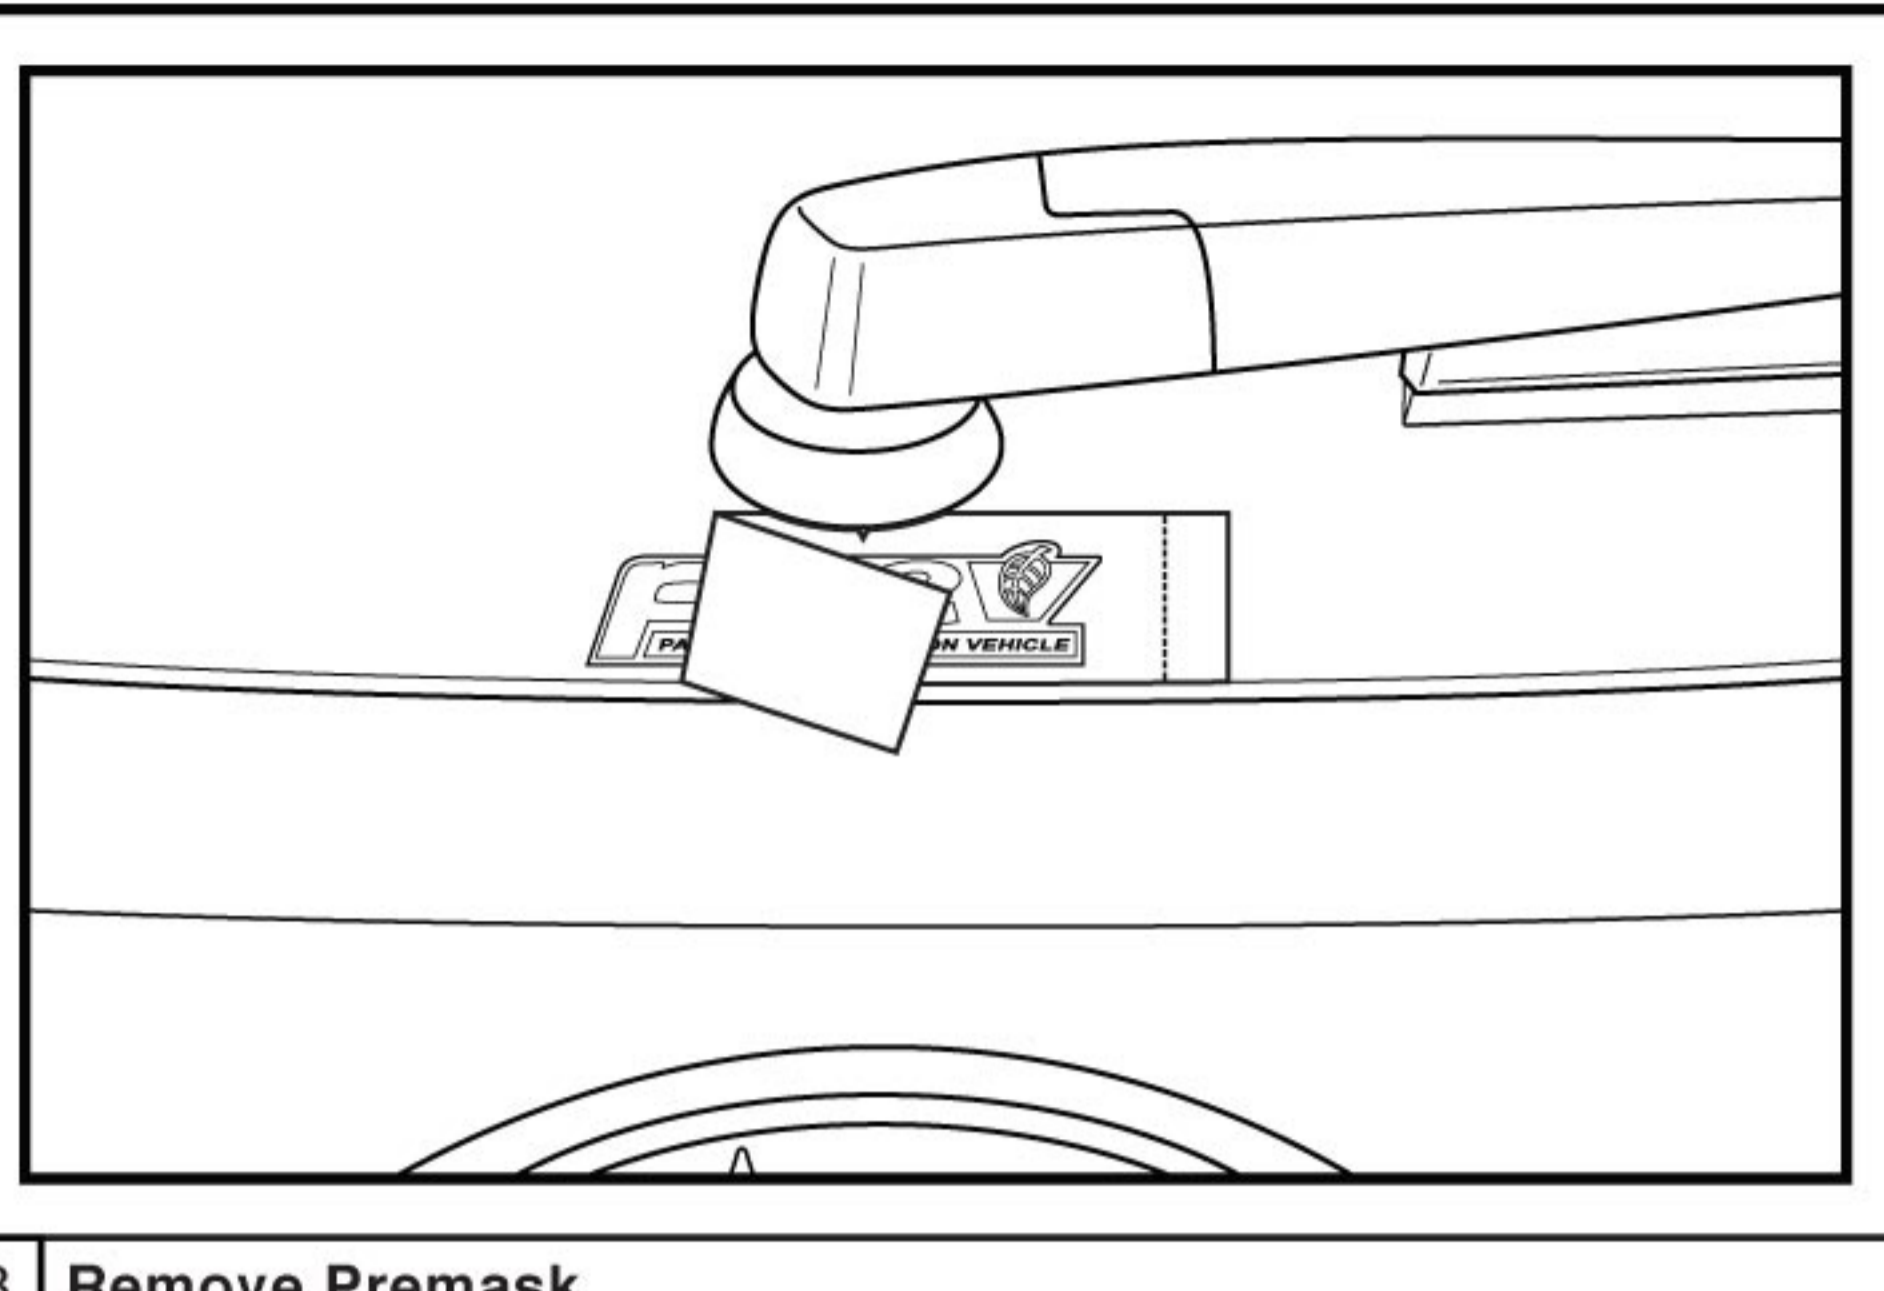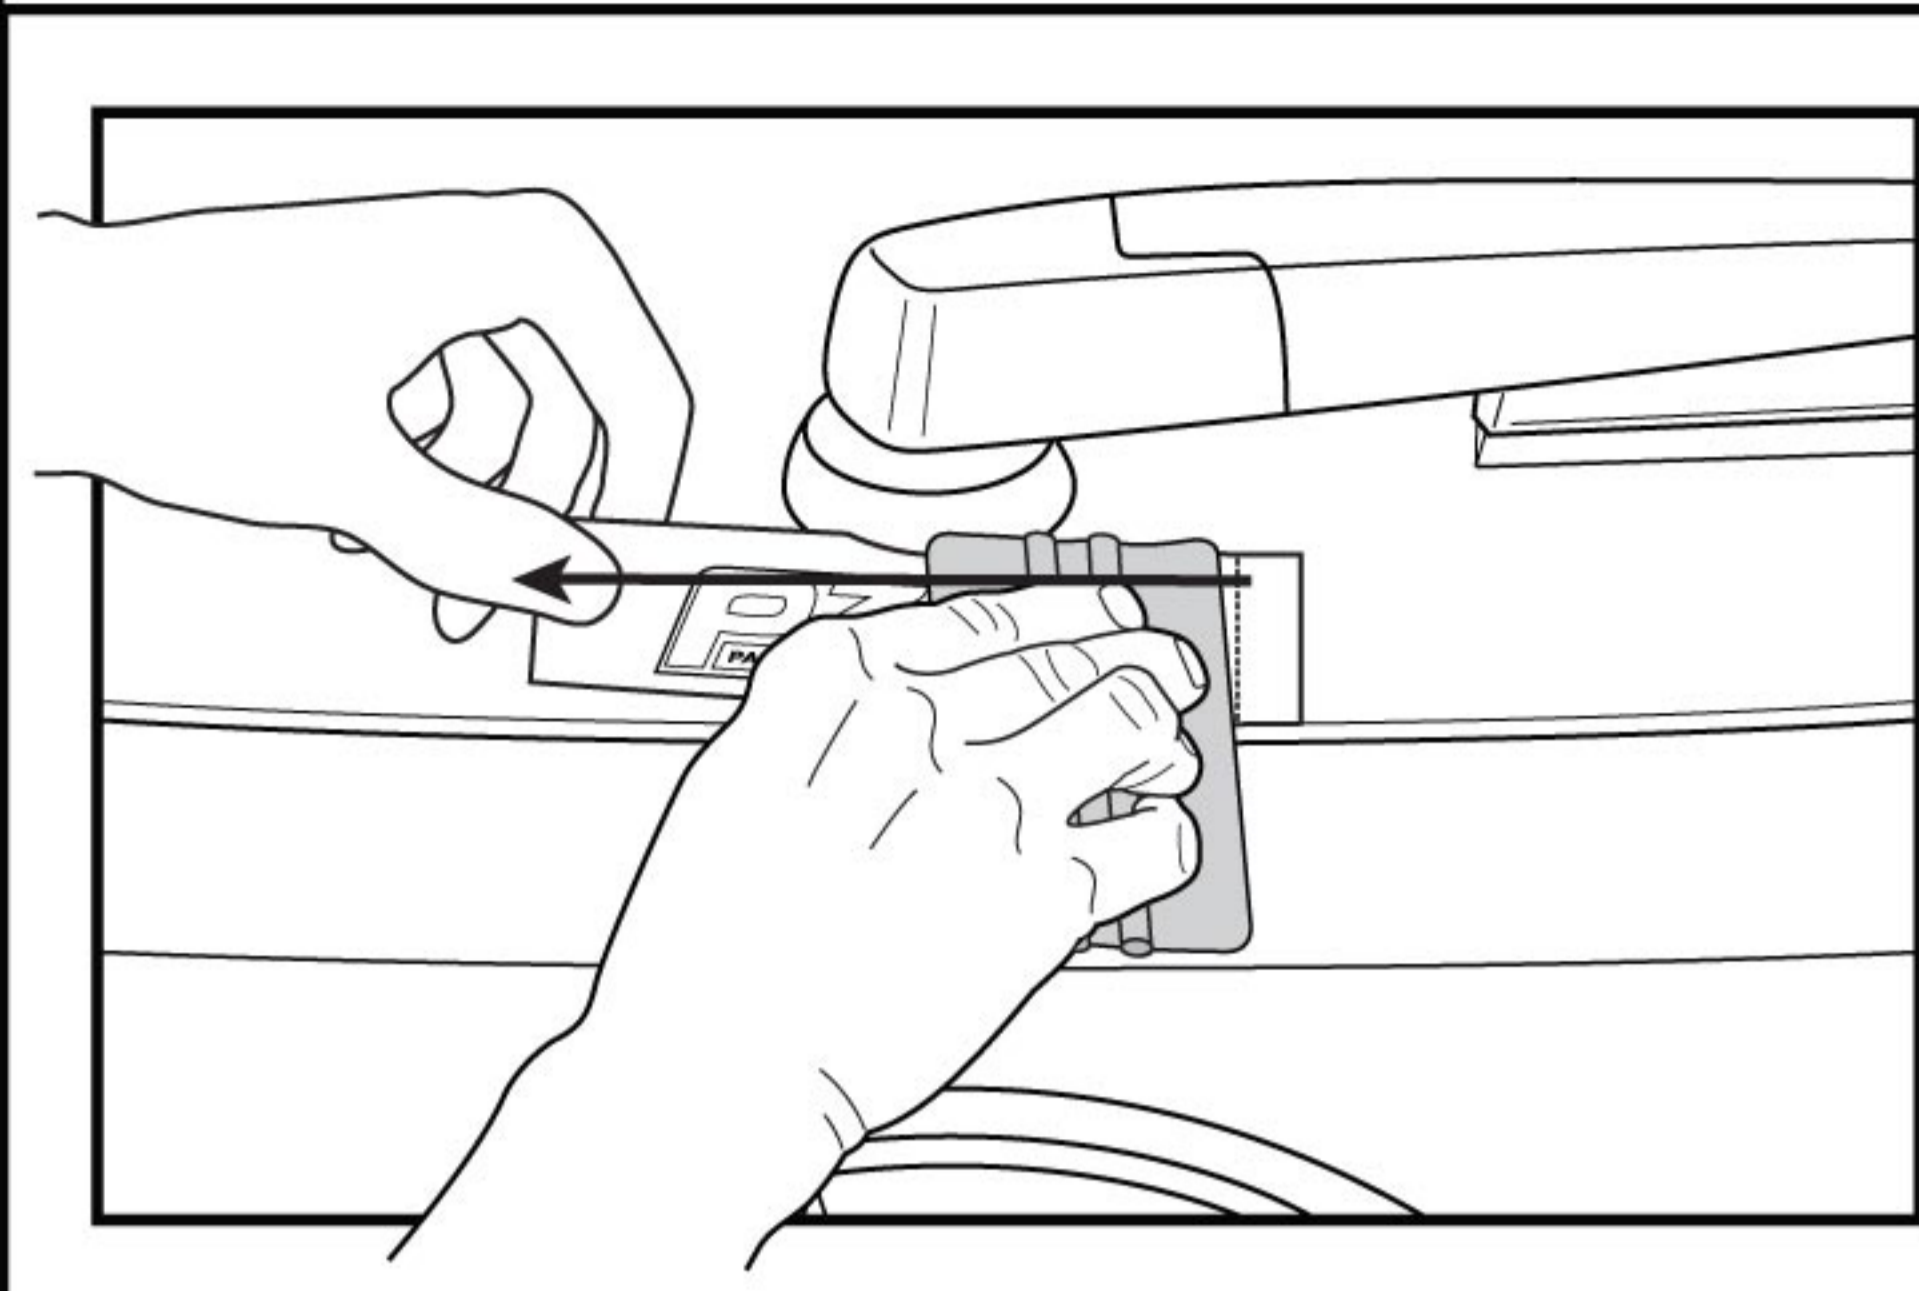


7 Adhere Decal

 Holding decal off of glass surface, squeegee with firm pressure smoothly across decal.



8 Remove Premask

 Carefully remove premask at 180 degrees, or back against itself. Inspect decal for bubbles.

Care and Cleaning

Items to be Checked	Results of the Check
 Wash decal with warm soapy water as needed, (do not use other chemical based cleaners).	

Visual Check

Items to be Checked	Results of the Check
 Check for bubbles. - If air entrapment is evident after installation is complete, re-squeegee decal.	
 Make sure all edges are firmly adhered.	